

Reset Modus

Following we explain you how to reset your Actiforce frame.

When connecting the power supply for the first time and when the the power supply has been interrupted, the height adjustment function is only available in reset mode. During the reset mode the frame can only be driven downwards. To complete this process and be able to operate the frame normally, please follow the steps below:

How to activate the reset mode:

- The table frame must be moved to the lowest position. This position serves as a reference point.
- Press and hold the down button for 10 seconds until the frame calibrated the end position.

Performing the reset mode:

- The end position is not the mechanically lowest position. The frame moves a few millimeter down and then automatically a few millimeter up.
- You have successfully reset your Actiforce frame and now can be operated normally by pressing the up or down button.

If you have any further questions, please do not hesitate to contact Mr. Magnus Müller.

Tel.: +49 (0) 5021 - 88 77 5 - 13

Mail: mmu@actiforce.com